



Bulletin #: 0022 Manufacturer: All Vehicle: All

Service: Fuel and Induction System

New BLAST O-Ring Requires Special Installation Procedure

The diameter of the O-ring for the BLAST service tool has changed, requiring a new procedure for replacing it.

Here's how:

- Heat a cup of water for $2\frac{1}{2}$ -3 minutes in the microwave.
- Place the new O-ring in the heated water for a couple minutes.
- Remove O-ring with pliers or tweezers.
- Lightly oil the O-ring with clean oil.
- Roll the O-ring carefully onto threaded portion of the BLAST tool.

Failure to follow this procedure will damage the O-ring.